

NuVIEW Installation Instructions

Navitar/NuView Series 681 lens on Eiki model LC- 80 Projectors.

TOOLS REQUIRED: PHILLIPS HEAD SCREWDRIVER

Disassembly:

1. Disconnect unit from power source and place projector with lens facing you. Remove two (2) screws from top cover of lens. Remove cover and set aside for reinstallation.
2. Remove prime lens by lifting the lever on the left side of the prime lens and sliding the lens away from the projector.

Assembly:

1. Ensure that your Navitar lens and its adapter are separate. Position the adapter with the 'up' label in the correct position and slide the adapter into the projector ensuring proper engagement. Rotate the lever counterclockwise until the adapter is securely in place.
2. Replace the front cover of the projector removed in step 2, above.
3. Install the lens by gently rotating clockwise as it is inserted into the adapter.
4. To focus, gently twist the front of lens. To zoom, loosen thumbscrew and twist knurled ring (zoom lenses only, of course). Re-tighten thumbscrew. CAUTION: Do not twist entire lens out of adapter!

Navitar, Inc.
200 Commerce Drive
Rochester, New York
14623

Phone
585.359.4000
800.828.6778

Fax
585.359.4999

navitar.com
info@navitar.com